



### Directions for Using Remote Button



**ARM AWAY:** Press alarm lock button one time. LED indicator light outside your home should flash red.

**ARM PERIMETER ONLY:** Press alarm lock button and hold for 3 (three) seconds. LED indicator light should stay solid red.

**DISARM:** Press alarm unlock button one time. LED indicator light should flash green or stay solid green.

**PANIC:** Press and hold alarm lock and unlock button simultaneously for 3 (seconds).

**Should you need further assistance, please contact our office at 803-648-4980.**